

**To turn the props on/off**, please hold the button for a period of 3-4 sec. When turning it on, hold the button until the red flash appears. When turning it off, hold the button until the blue flash appears.

**Modes.** The props have 4 mode groups in total. After the props are turned on, you can look through all the color schemes available inside the group you are in at the moment, just by pressing the button shortly (quickly). To move to the next mode group, you need to press and hold the button for 1-2 sec, until you see the green flash. It means that you are in the next group and now you can look through all the available modes in it.

**DEMO MODE.** The very first mode in the 1-st group is the demonstrational mode, which glows white at first, and than automatically, with around 7 sec interval, switches between the most spectacular modes that the poi have.

**Charging.** To charge the props please use USB charger and cable. Full charge time is about 2 hours. 50% charge is achieved in 1 hour. For IzoPoi and DropPoi: before charging, please remove a protective cap from the poi "head", and use a micro-usb port under it.

**Charge level.** When the props are connected to the power grid, red color means that the props are charging, green means that the props are charged. If the props are blinking with red light during turning on or exploitation, it means that the charge level is low. + When you push the switch on button, you can see led color, the color may vary in accordance with the charge level left, from green to red color.

**Power saving mode.** The props have a power saving function, which allows you to extend working time by 2 or 3 times. When the energy saving mode is on, the props visually glow two times less brightly. To turn this mode on, please press and hold the button until the purple (pink) flash appears. To turn this mode off, you need just to turn the props off.

**ATTENTION! PLEASE DO NOT KEEP THE PROPS UNCHARGED FOR A LONG TIME!**

#### **New update - since December 2020**

At the request of customers, to the basic 32 modes, we added +32 more modes without strobe effects with smooth overflows and gradients, both in the knobs and in the poi heads themselves.

How to switch between these two mode schemes? The kit contains instructions for standard firmware. To go to another directory, which will also contain 32 modes (4 groups of 8 modes each) with exactly the same control, it is necessary to hold down the button for a long time when switching on, until the green indication is turned on, then release the button.

When poi turning off, system remember the last group and the last mode selected by the user, each time you turn off you will remain in the selected group of modes. For coming back to standard scheme with strobe effects, you need again to perform the operation with a long press when switching on, until a red flash, which will mean that you have returned to the original scheme of 32 modes with strobe effects.