

User's Manual / Instruction - SPECTRUM series (LeviWand, Nunchaku, Lightsaber, Staffs...)

To turn the props on/off, please hold the button for a period of 3-4 sec. When turning it on, hold the button until the red flash appears. When turning it off, hold the button until the blue flash appears.

Modes. The props have 4 mode groups in total. After the props are turned on, you can look through all the color schemes available inside the group you are in at the moment, just by pressing the button shortly (quickly). To move to the next mode group, you need to press and hold the button for 1-2 sec, until you see the green flash. It means that you are in the next group and now you can look through all the available modes in it.

DEMO MODE. The very first mode in the 1-st group is the demonstrational mode, which glows white at first, and than automatically, with around 7 sec interval, switches between the most spectacular modes that the poi have.

Charging. To charge the props please use USB charger and cable. Full charge time is about 2 hours. 50% charge is achieved in 1 hour. For IzoPoi and DropPoi: before charging, please remove a protective cap from the poi "head", and use a micro-usb port under it.

Charge level. When the props are connected to the power grid, red color means that the props are charging, green means that the props are charged. If the props are blinking with red light during turning on or exploitation, it means that the charge level is low. + When you push the switch on button, you can see led color, the color may vary in accordance with the charge level left, from green to red color.

Power saving mode. The props have a power saving function, which allows you to extend working time by 2 or 3 times. When the energy saving mode is on, the props visually glow two times less brightly. To turn this mode on, please press and hold the button until the purple (pink) flash appears. To turn this mode off, you need just to turn the props off.